

## Quick Start for the HOBO® U-Series Data Logger



### Launching

**1** Open HOBOware® software (install first). Using a new logger model? Update to the latest free software at: [www.onsetcomp.com/hoboware-free-download](http://www.onsetcomp.com/hoboware-free-download)

**2** Connect logger to computer with USB cable. Connect any sensors to logger.



**3** Open Launch Logger window. Choose settings. Click Start.



Device > Launch

**4** Disconnect logger and deploy it. Logging will begin as determined by settings in Step 3.



16125-E MAN-U-QSG

### Reading Out

**5** Connect logger to computer and read it out (or use a HOBO U-Shuttle).



Device > Readout

**6** Plot data from logger. Print the plot, export data, save it as a project file, and more.



**7** Relaunch and redeploy logger as needed.



For detailed specifications and information about this logger, scan the code or go to:

[www.onsetcomp.com/support/manuals](http://www.onsetcomp.com/support/manuals)



© 2012-2018 Onset Computer Corporation. All rights reserved. Onset, HOBO, and HOBOware are trademarks or registered trademarks of Onset Computer Corporation.

This product has been manufactured by Onset Computer Corporation and in compliance with Onset's ISO 9001:2015 Quality Management System.

1-800-LOGGERS • 508-759-9500 • [www.onsetcomp.com/support/contact](http://www.onsetcomp.com/support/contact)