


**Quick Start for HOBO® Analog/Temp/RH/Light (MX1104) & 4-Channel Analog (MX1105) Loggers**

- 1
  - Download HOBObconnect® to a phone or tablet from the App Store® or Google Play™.
  - Download HOBObconnect to a Windows® computer from [www.onsetcomp.com/products/software/hobobconnect](http://www.onsetcomp.com/products/software/hobobconnect).

- 2 Open the app. Enable Bluetooth® in your device settings if prompted.

- 3 Install any external self-describing sensors as shown.

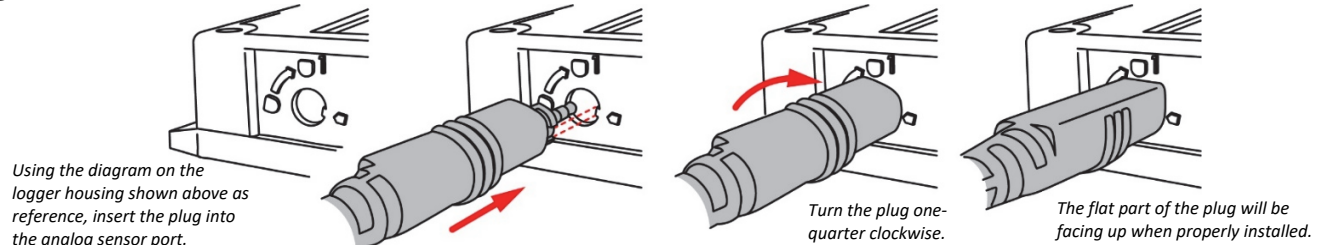

For other types of external analog sensors, insert the sensor plug into an analog sensor port.

- 4 Press either button on the logger to wake it up.

- 5 Tap Devices in the app. Tap the logger tile in the app to connect to the logger. (Press the top button on the logger again to bring it to the top of the list if there are multiple loggers.) If the logger does not appear in the list, make sure it is within range of your phone, tablet, or computer.

- 6
  - a. Once connected, tap Configure & Start to set up the logger.
  - b. Choose your logger settings, including selecting settings for any external analog sensors. Make sure all channels you want to log are enabled.
  - c. Tap Start to save the settings to the logger. The logger begins logging based on the settings you selected. Press the start button on the logger if you set it up to start logging with a button push.


23967-G MAN-MX1104-MX1105-QSG

**Quick Start for HOBO® Analog/Temp/RH/Light (MX1104) & 4-Channel Analog (MX1105) Loggers**

- 1
  - Download HOBObconnect® to a phone or tablet from the App Store® or Google Play™.
  - Download HOBObconnect to a Windows® computer from [www.onsetcomp.com/products/software/hobobconnect](http://www.onsetcomp.com/products/software/hobobconnect).

- 2 Open the app. Enable Bluetooth® in your device settings if prompted.

- 3 Install any external self-describing sensors as shown.

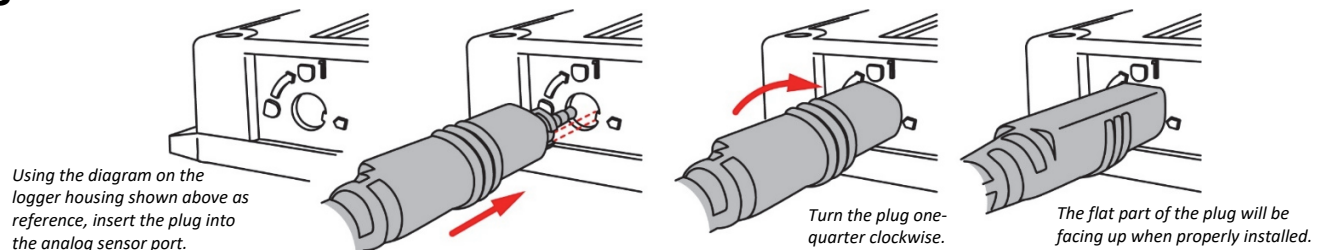

For other types of external analog sensors, insert the sensor plug into an analog sensor port.

- 4 Press either button on the logger to wake it up.

- 5 Tap Devices in the app. Tap the logger in the app to connect to it. (Press the top button on the logger again to bring it to the top of the list if there are multiple loggers.) If the logger does not appear in the list, make sure it is within range of your phone, tablet, or computer.

- 6
  - a. Once connected, tap Configure & Start to set up the logger.
  - b. Choose your logger settings, including selecting settings for any external analog sensors. Make sure all channels you want to log are enabled.
  - c. Tap Start to save the settings to the logger. The logger begins logging based on the settings you selected. Press the start button on the logger if you set it up to start logging with a button push.

23967-G MAN-MX1104-MX1105-QSG

- 7** Deploy the logger to the location where you want to monitor conditions. Insert one of the included plugs into any empty ports. Follow additional deployment guidelines in the full product manual at [www.onsetcomp.com/resources/documentation/23968-mx1104-and-mx1105-manual](http://www.onsetcomp.com/resources/documentation/23968-mx1104-and-mx1105-manual).
- 8** Tap Devices, connect to the logger, and then tap Download Data.  
After the download is complete, you can choose to export and share the file. You can also view your files by tapping Data at the bottom of the screen.



For detailed specifications and information about the logger, scan the code above or go to [www.onsetcomp.com/support/manuals/23968-mx1104-and-mx1105-manual](http://www.onsetcomp.com/support/manuals/23968-mx1104-and-mx1105-manual).

Quick Reference	Press for 1 second to:	Press and hold for 3 seconds to:	Press and hold for 10 seconds to:
<b>Top button</b>	<ul style="list-style-type: none"> <li>• Cycle through each channel to view the latest sensor readings.</li> <li>• Wake up the logger.</li> <li>• Bring the logger to the top of the list in the app.</li> <li>• Silence a beeping alarm.</li> <li>• Turn on the LCD.</li> </ul>	Start, stop, or resume logging (depending on settings chosen in the app).	NA
<b>Bottom button</b>	<ul style="list-style-type: none"> <li>• Cycle through any statistics and alarm readings for the channel currently displayed (if applicable).</li> <li>• Wake up the logger.</li> <li>• Silence a beeping alarm.</li> <li>• Turn on the LCD.</li> </ul>	Clear an alarm for the channel currently displayed (depending on the settings chosen in the app).	NA
<b>Both buttons</b>	NA	NA	Reset a password

**OneTemp**<sup>o</sup>  
measure | control | record  
1300 768 887  
[www.onetemp.com.au](http://www.onetemp.com.au)

© 2019–2023 Onset Computer Corporation. All rights reserved. Onset, HOBO, and HOBObconnect are registered trademarks of Onset Computer Corporation. App Store is a service mark of Apple Inc. Google Play is a trademark of Google LLC. Windows is a registered trademark of Microsoft Corporation. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective companies.

This product has been manufactured by Onset Computer Corporation and in compliance with Onset's ISO 9001:2015 Quality Management System.

Patent #: 8,860,569

23967-G MAN-MX1104-MX1105-QSG

- 7** Deploy the logger to the location where you want to monitor conditions. Insert one of the included plugs into any empty ports. Follow additional deployment guidelines in the full product manual at [www.onsetcomp.com/resources/documentation/23968-mx1104-and-mx1105-manual](http://www.onsetcomp.com/resources/documentation/23968-mx1104-and-mx1105-manual).
- 8** Tap Devices, connect to the logger, and then tap Download Data.  
After the download is complete, you can choose to export and share the file. You can also view your files by tapping Data at the bottom of the screen.



For detailed specifications and information about the logger, scan the code above or go to [www.onsetcomp.com/support/manuals/23968-mx1104-and-mx1105-manual](http://www.onsetcomp.com/support/manuals/23968-mx1104-and-mx1105-manual).

Quick Reference	Press for 1 second to:	Press and hold for 3 seconds to:	Press and hold for 10 seconds to:
<b>Top button</b>	<ul style="list-style-type: none"> <li>• Cycle through each channel to view the latest sensor readings.</li> <li>• Wake up the logger.</li> <li>• Bring the logger to the top of the list in the app.</li> <li>• Silence a beeping alarm.</li> <li>• Turn on the LCD.</li> </ul>	Start, stop, or resume logging (depending on settings chosen in the app).	NA
<b>Bottom button</b>	<ul style="list-style-type: none"> <li>• Cycle through any statistics and alarm readings for the channel currently displayed (if applicable).</li> <li>• Wake up the logger.</li> <li>• Silence a beeping alarm.</li> <li>• Turn on the LCD.</li> </ul>	Clear an alarm for the channel currently displayed (depending on the settings chosen in the app).	NA
<b>Both buttons</b>	NA	NA	Reset a password

**OneTemp**<sup>o</sup>  
measure | control | record  
1300 768 887  
[www.onetemp.com.au](http://www.onetemp.com.au)

© 2019–2023 Onset Computer Corporation. All rights reserved. Onset, HOBO, and HOBObconnect are registered trademarks of Onset Computer Corporation. App Store is a service mark of Apple Inc. Google Play is a trademark of Google LLC. Windows is a registered trademark of Microsoft Corporation. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective companies.

This product has been manufactured by Onset Computer Corporation and in compliance with Onset's ISO 9001:2015 Quality Management System.

Patent #: 8,860,569

23967-G MAN-MX1104-MX1105-QSG