


Getting Started with InTemp®

For Use with CX400 Series Loggers

There are two ways of using the InTemp system:


How will you be using the InTemp system?

Choose one of the following two scenarios:

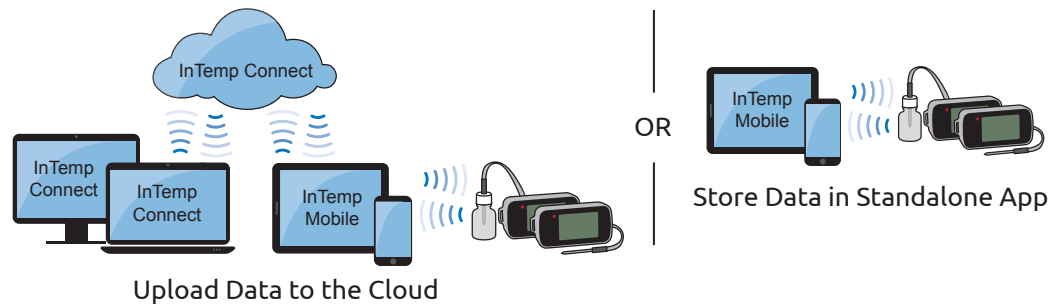


I will be monitoring at multiple locations. I need access to all data in the InTempConnect® cloud, but other people will be starting and downloading the loggers.


- Go to www.intempconnect.com and follow the prompts to set up an administrator account (A). You'll receive an email to activate the account. Once it is activated, log in (B).

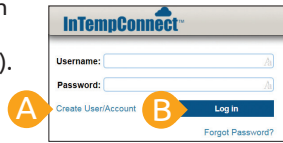


- Click Settings and then Users. Click Add User (A). Enter the email address and name of the user who will be starting and downloading the logger (B). Select the role for the user and click the right arrow button (C) to move it to the Assigned Roles list. Click Save (D). Repeat for any other new users. The users will receive an email to activate their account.

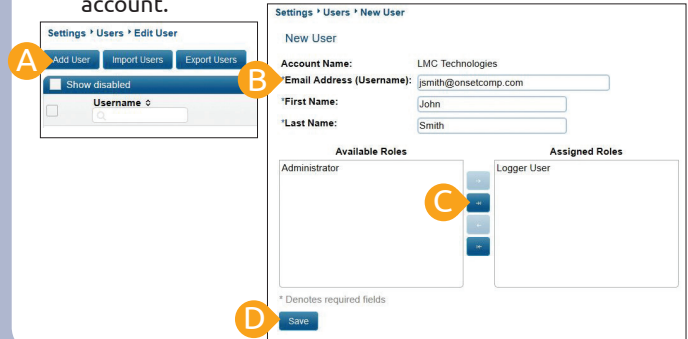

- In InTempConnect, click Settings and Roles. The administrator role with all privileges is automatically assigned to you. Click Add Role (A) to create a role for the people who will be starting and downloading loggers.

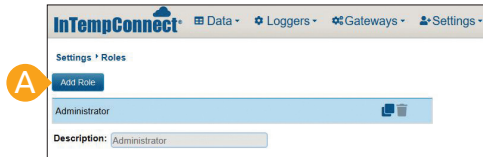

- For the Description, type the name of the role (A), such as Logger User. Select relevant privileges with a mobile device icon (which represents the InTemp app) from the list of Available Privileges on the left and click the right arrow button (B) to move them to the Assigned Privileges list on the right. Click Save (C).

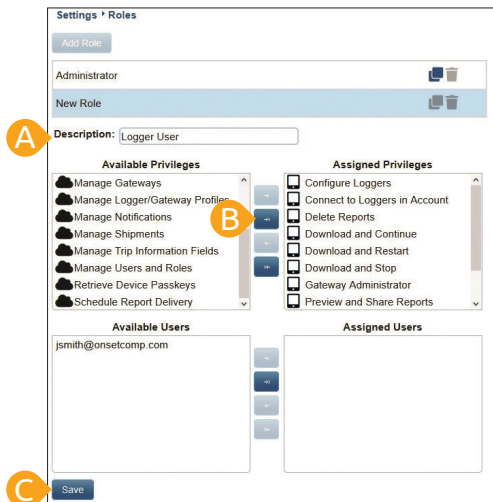

Tip: Privileges for InTempConnect are noted with a cloud icon. If you want the user to also have certain InTempConnect privileges (such as running reports), add the privileges to the role.

- The profiles that users will select to start the loggers in the InTemp app are saved in InTempConnect. Click Loggers and then Logger Profiles to see the list of default profiles. Note the name of the profile you want users to select (A).

Loggers > Logger Profiles		Profiles						
Enabled	Name	Logger Family	Logging Interval	Start Option	Alarm Limit	Alarm Trip Value	Actions	
<input checked="" type="checkbox"/>	CDC/FC Clinical Refrigerator	CX400	15m	After a fixed delay of 30m	36.00 to 46.00 °F	Alarm on first sample out of limits	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Refrigerator	CX400	5m	After a fixed delay of 30m	35.60 to 46.40 °F	30m of consecutive samples before alarm trips	<input checked="" type="checkbox"/>	
<input checked="" type="checkbox"/>	Freezer	CX400	5m	After a fixed delay of 30m	-13.00 to 5.00 °F	30m of consecutive samples before alarm trips	<input checked="" type="checkbox"/>	
<input checked="" type="checkbox"/>	Ambient Storage	CX400	5m	After a fixed delay of 30m	69.00 to 77.00 °F	30m of consecutive samples before alarm trips	<input checked="" type="checkbox"/>	

Tip: Click Add Logger Profile if you want to create your own profile. If you plan to use the logger with the InTempVerify™ app, then make sure InTempVerify is enabled in the profile. Once the profile is saved in InTempConnect, it will be available for users in the InTemp app. See www.intempconnect.com/help for details.


- Your users can now set up, start, and download loggers with the InTemp app. Give them the instructions on page 2 to follow.

You can check on the loggers associated with your account and run reports on them in InTempConnect. Click Data and then Logger Configurations. You can also use the CX5000 Gateway to configure and download loggers. The InTempVerify app is also available to easily download loggers. For details, see www.intempconnect.com/help.

InTempConnect Account Administrators: After you set up an InTempConnect account (see the steps on page 1), give these instructions to the users in your account who will be starting and downloading loggers with the InTemp app. Be sure to tell users the configuration name you want them to select when starting the loggers.

How to Start and Download Loggers


1 Install logger batteries and insert probe (if applicable).

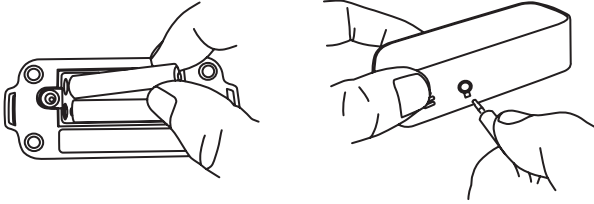


2 Download the InTemp app to your phone or tablet.




3 Open the app and log in (A) with InTempConnect credentials (B). Do not create an InTemp app user account because then the app would not be able to share data with the InTempConnect cloud.

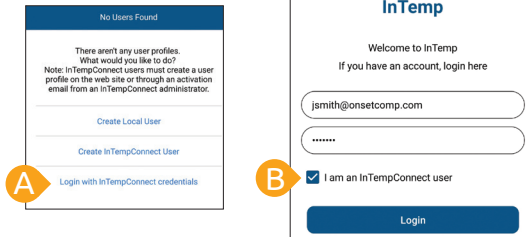


4 If the logger profile includes a daily temperature check, you can set up a reminder to perform the check. Tap Settings (A) and then tap Reminders (B) and choose Enable Morning and/or Afternoon Reminder. (C)

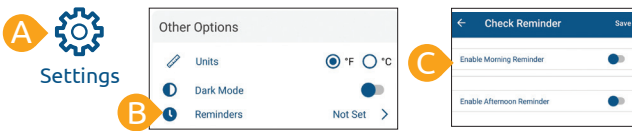


5 Tap Devices (A). Find the logger in the list and tap it to connect to it (B). The logger must be within range of the mobile device.




6 Tap Configure (A). Type a name for the logger (B). Swipe left and right to select the logger profile you have been instructed to use and tap Start (C).

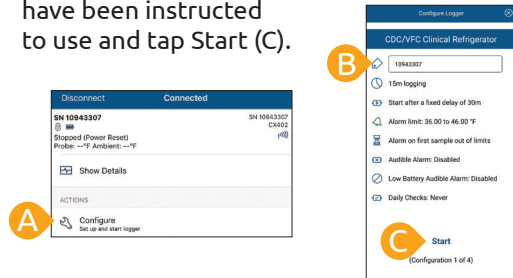

7 Deploy the logger to the location you will be monitoring.

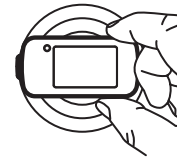

8 To download the logger, connect to it and tap Download (A); choose Download and Stop if you want to restart the logger with a new profile. Once downloaded, you can share the logger report immediately or access it later by tapping Reports (B). To perform a daily logger check, connect to the logger (see step 5) and tap Perform Daily Check.

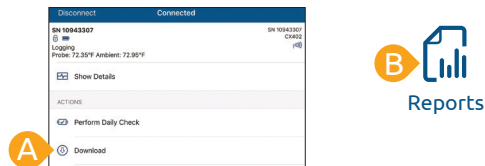


Note: The CX5000 Gateway is available for automatically configuring and downloading loggers and uploading data to InTempConnect. The InTempVerify app is also available to easily download loggers. See www.intempconnect.com/help for details.

To access a NIST certificate for the logger in InTempConnect:

1. Click Data and then Logger Configurations.
2. Scroll through the table or enter search criteria to find a specific configuration.
3. Click the link in the Logger Label column to view the configuration details page.
4. Under Configuration Info, scroll to NIST Certificate and click Download.

I am setting up one or more loggers for use at a single site. I will be using the InTemp mobile app only to download logger data. I do not need to store my data remotely in the cloud (InTempConnect).


1 Install logger batteries and insert probe (if applicable).

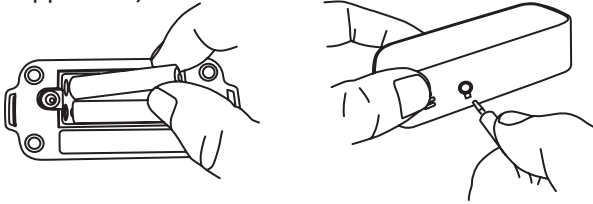


2 Download the InTemp app to your phone or tablet.




3 Open the app. Create a user account (A). Fill in the fields and tap Create Account (B). Log in (C); do not log in as an InTempConnect user.

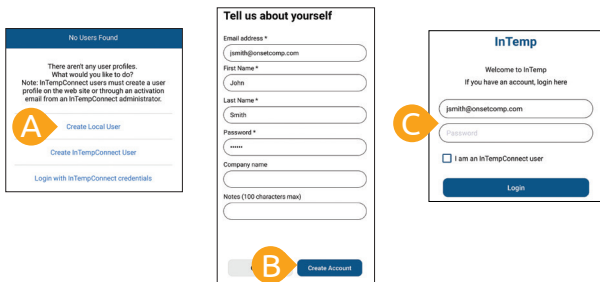


4 For VFC and clinics only: Required daily temperature checks can be performed by the user and recorded by the logger. To use this function in addition to your daily log or to replace it, tap Settings (A) and then tap Record CX400 Logger Checks (B). Choose Twice Daily or Once Daily (C).

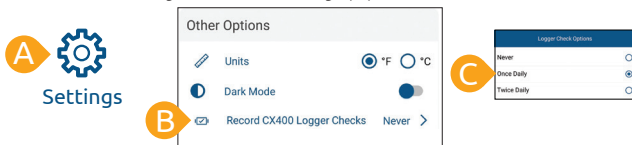

5 Tap Devices (A). Find the logger in the list and tap it to connect to it (B). The logger must be within range of the mobile device.



6 Tap Configure (A). Type a name for the logger (B). Swipe left and right to select a logger profile and tap Start (C).

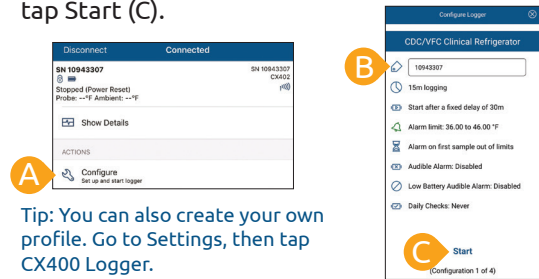


Tip: You can also create your own profile. Go to Settings, then tap CX400 Logger.

7 Deploy the logger to the location you will be monitoring.



8 To download the logger, connect to it and tap Download (A); choose Download and Stop if you want to restart the logger with a new profile. Once downloaded, you can share the logger report immediately or access it later by tapping Reports (B). To perform a daily logger check, connect to the logger (see step 5) and tap Perform Daily Check.

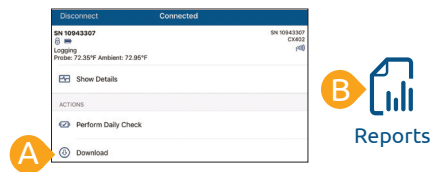

Tip: If you want to use InTempConnect in the future, download and stop the logger first and then log in as an InTempConnect User to reconfigure.